

Henkelman Aura

Quick Start Guide

Scan the QR code to download the user manual



Prior to first use

Carefully read the safety instructions on the back side of this guide.
Check the oil sight glass to see if the amount of oil in the pump is sufficient.
If the amount of oil in the pump is insufficient, refill it.
See the user manual for more information.

Displays all programs marked as favorites. This way you can reach your most used programs at the touch of a button.

You can select the best vacuum program based on product recognition.



Configure and change the machine settings.



Switch users to change authority levels. User information is also used for HACCP purposes and can be printed on a label.

Here you will find product-independent programs such as Seal only and Quick vacuum.



Press the On/Off button to start and operate the machine.



Run the pump cleaning program daily to prevent moisture damage to the pump.

Do the pre-installed product programs not meet your needs? Then put together new ones yourself.

Changing machine settings

Click the user button and provide the owner login (1324). The machine settings menu is now available to make alterations to the machine configuration.

After choosing the right program for your product you can place the product in the machine, in a suitable seal bag and close the lid, after which the process will start. For the best end result, we recommend cooling the product to 2 to 4 °C before packaging. This prevents the product from boiling.

Safety Instructions



Follow the safety instructions listed below at all times. This is the short version containing the most important safety instructions, for a complete overview we refer you to the user manual. This can be downloaded by scanning the QR code or can be downloaded from our website: www.henkelman.com.



The machine is not suitable for the packaging of toxic, corrosive, irritant or potentially explosive materials.

The correct operation and safety of the system can only be guaranteed if the recommended maintenance is performed on time and properly.

Pictograms on the machine



 
Warning sign “High Voltage”
is located on the back of the machine



Warning sign “Heat”
is located on the sealing bars and on the vacuum pump



Warning sign “Gas Connection” (optional)
Forbidden to connect oxygen. Only nutritional gases or inert gases are allowed
is located on the back of the machine



Machine plate
is located on the back of the machine
Here you can find the machine type, machine number, voltage, current, power and construction year.

Regularly check whether the pictograms and markings are still clearly recognisable and legible. Replace them if this is not the case.

General warnings



- Operating personnel must be 18 years or older.
- Never pack products that can be damaged by vacuum.
- Never vacuum live animals.
- High pressure cleaning is not allowed. This may cause damage to the electronics and other components.
- Do not use any aggressive, toxic or solvent cleaning agents.
- It is forbidden to start the machine in an explosive environment.
- The available safety devices may not be removed.
- Only a technical expert may perform work on the electrical installation.
- The machine may not be used during cleaning, inspection, repair or maintenance and must be disconnected from the power supply by disconnecting the plug.
- The machine may not be used if the plastic/glass lid shows visible damage or cracks. Contact your dealer for professional service.
- If the gassing option is used, the gas supply must be shut off when the machine is no longer in use. The work area must also be sufficiently ventilated.

Warnings during use



- Components of the sealing system can become very hot. Contact with these components may cause injuries.